


* STA LOCATIONS WITH REF. TO BOEING BODY STA.
 * BA LOCATIONS IN BRACKETS (XXXX) WITH REF. TO BALANCE ARM.

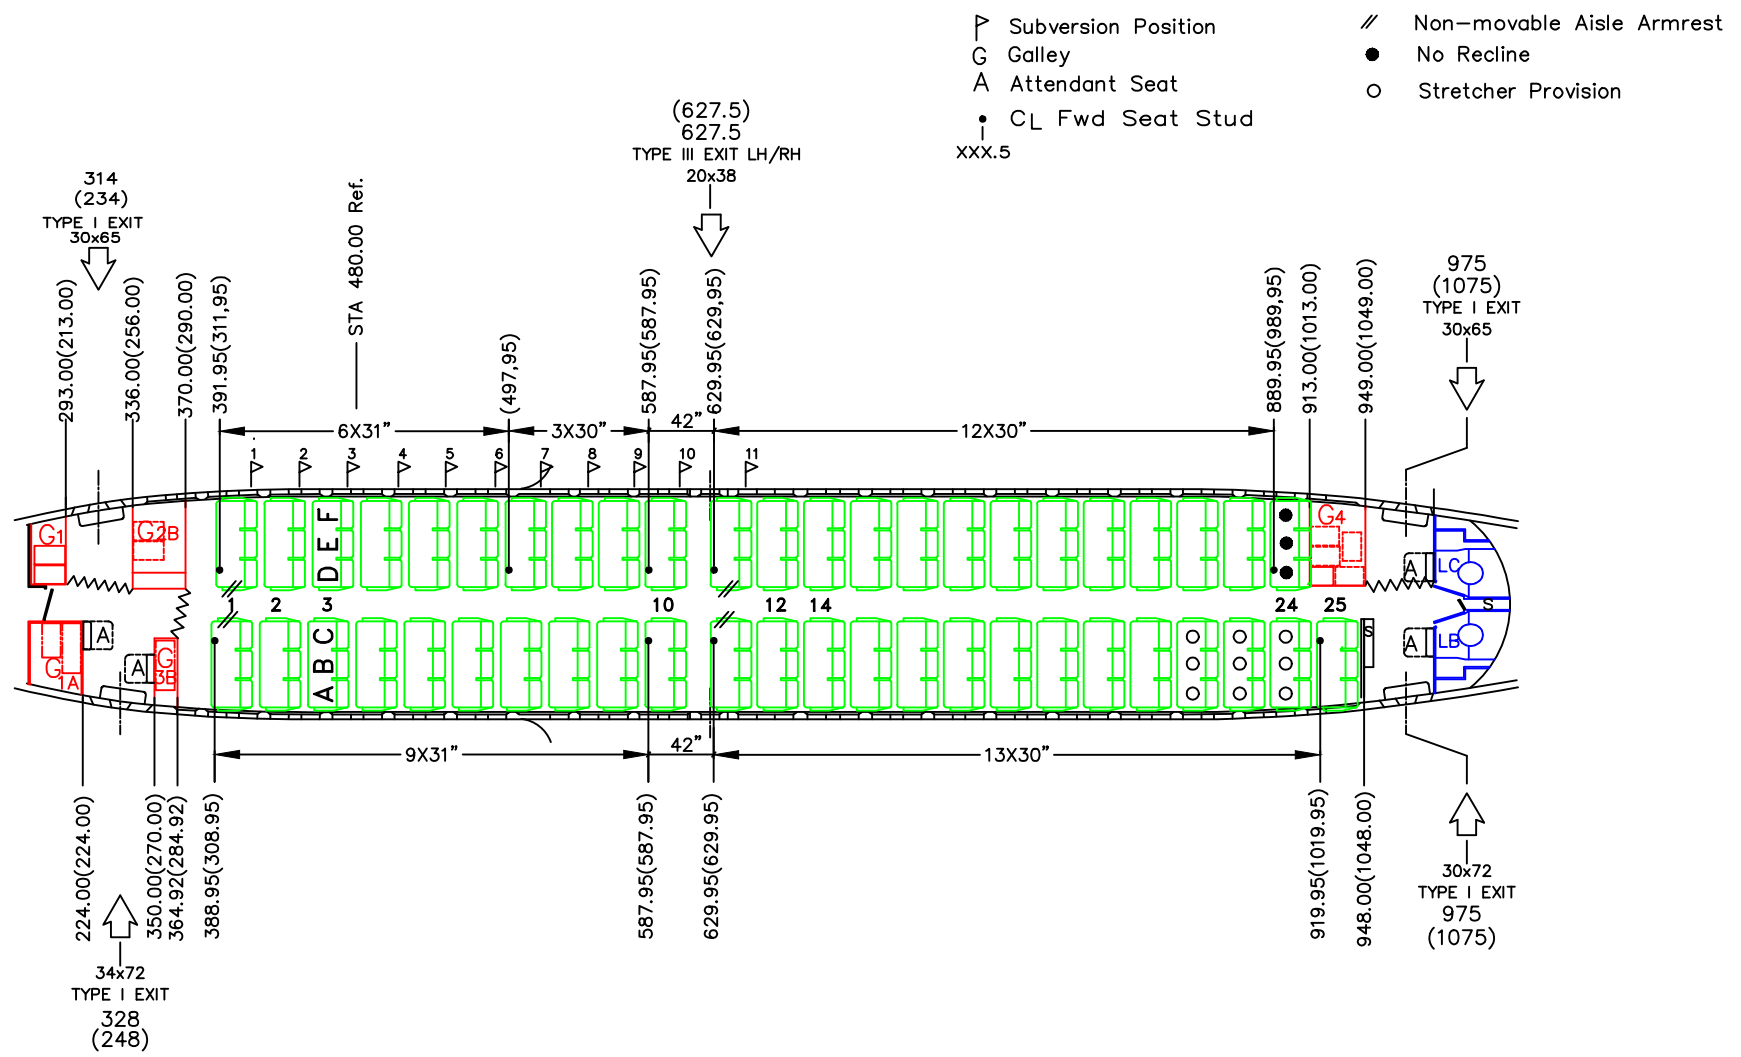

Capacity – 141 Passenger Seats

For Subversions see document GE-2221

Version 7379

B				
A				
LTR	REVISION – DESCRIPTION		DATE	SIGN
737-700 Cabin Configuration			Scandinavian Airlines System	
STOMR-L/BF			STOME-L	DATE 23OCT14
AutoCad FILE (.DWG)		SCALE	AIRPLANE MODEL	DWG #
737_1031		1/XX	Boeing 737-700	ME-737-1031
			Scandinavian Technical Operation STOME	

B737-700

Cabin Version
7379
Recaro BL3520

[LN-RPK](#)
[LN-RPJ](#)
[LN-RNN](#)
[LN-RNO](#)
[LN-RRM](#)
[LN-RRN](#)

B737-700

Cabin Version
7375
Sicma 3016

[LN-RRR](#)
[LN-RRB](#)

Seat configuration valid for cabin version:
7379

Ref Recaro BL3520D CMM 25-22-45

Emerg. Exit

A	B	C	AISLE	D	E	F
1A	1B	1C		1D	1E	1F
2A	2B	2C		2D	2E	2F
3A	3B	3C		3D	3E	3F
4A	4B	4C		4D	4E	4F
5A	5B	5C		5D	5E	5F
6A	6B	6C		6D	6E	6F
7A	7B	7C		7D	7E	7F
8A	8B	8C		8D	8E	8F
9A	9B	9C		9D	9E	9F
10A	10B	10C		10D	10E	10F
11A	11B	11C		11D	11E	11F
12A	12B	12C		12D	12E	12F
14A	14B	14C		14D	14E	14F
15A	15B	15C		15D	15E	15F
16A	16B	16C		16D	16E	16F
17A	17B	17C		17D	17E	17F
18A	18B	18C		18D	18E	18F
19A	19B	19C		19D	19E	19F
20A	20B	20C		20D	20E	20F
21A	21B	21C		21D	21E	21F
22A	22B	22C		22D	22E	22F
23A	23B	23C		23D	23E	23F
24A	24B	24C		24D	24E	24F
25D	25E	25F		No Seat	No Seat	No Seat


Emerg. Exit

Seat Belt P/N, all seats: 2192 - 1 - 011 - 8088
See below for correct buckle position.

RECARO
Recaro Aircraft Seating GmbH & Co. KG, Daimlerstrasse 21, 74523 Schwäbisch Hall
COMPONENT MAINTENANCE MANUAL – 3520D & 3520E TYPE
937 SERIES

SEAT BELT INSTALLATION

RH Seats (schematic view only) FWD LH Seats (schematic view only)

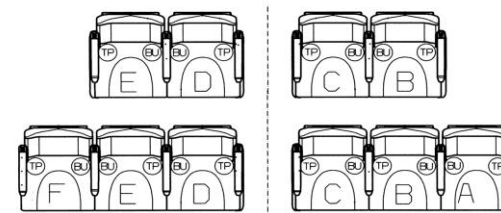

(TP) POSITION OF CONNECTOR HALF (TIP FIXED LENGTH)
(BU) POSITION OF BUCKLE (VARIABLE LENGTH)

Typical; Double seat is not used in this version